



ANTI-STATIC WORKSTATION CONNECTION DIAGRAM ABWS1 & ABWS2

Lay the anti-static mat flat on top of the work bench. Snap the 15' mat ground cord onto the corner of the anti-static mat.

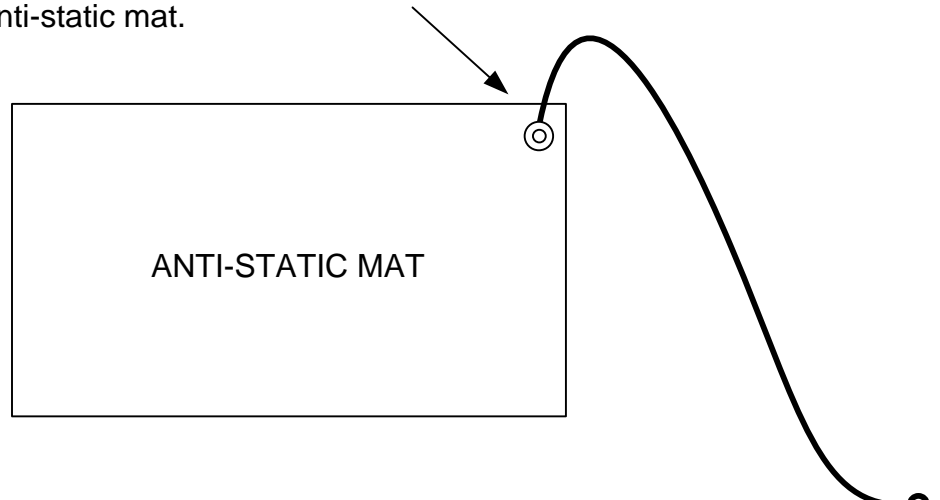

Connect the eyelet end of the mat ground cord *and* the eyelet end of the cord from the wrist strap grounding bracket to earth ground.

Mount the wrist strap grounding bracket in any convenient location under the front edge of the work bench (mounting hardware not provided).

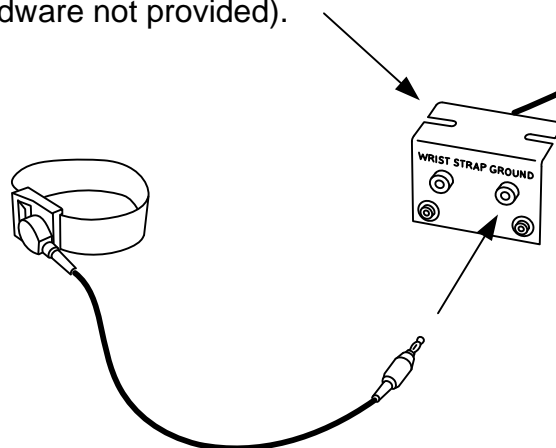

Connect the wrist strap ground cord banana plug into either banana jack on the wrist strap grounding bracket .